 


Please read this guide carefully.

 
1. Names and functions

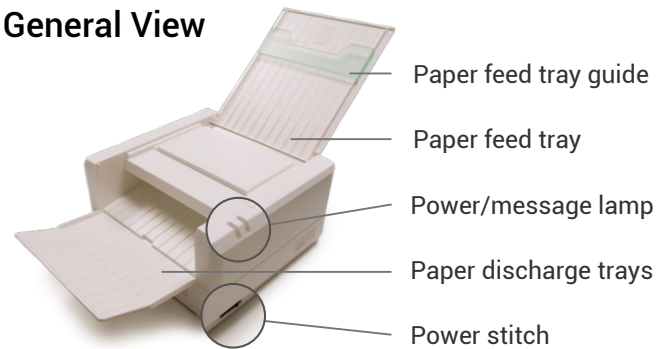

General View



Rear View

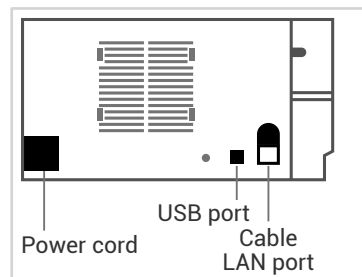

2. Installation

Space for Installation

 


Caution: Install this machine in the location which satisfies the following conditions:


- No direct sunlight and not dusty.
- Low humidity and not exposed to sun, liquids such as water, oil or chemicals.
- Away from any magnetism or radio wave generating equipment such as TV and wireless system.
- Level, solid and stable area
- The gap of 10 centimeter or more shall be set around the machine.
- Allow a distance of 10cm around the device.

Inserting the power cord

Verify that the power switch is turned OFF before inserting the cord to the power outlet.

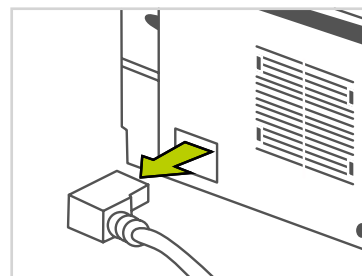

100-240V ~
50/60Hz
2A

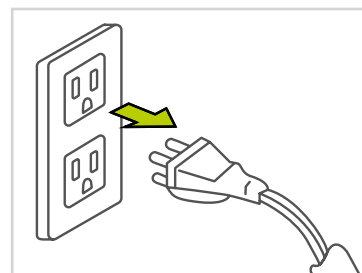 

Please read this guide carefully.

3. Installation for USB printer driver

 
To print with the Tactonom Tactile Printer, install the driver and software first.

Supported OS: Windows[®] 7/8.1/10

- 1 Install the application software for USB printer driver. Use the USB stick supplied for this purpose and connect it to your PC.
- 2 Install the USB printer driver.

4. Tactile Paper

- 1 Open the paper feed tray and paper discharge tray.
- 2 Insert the Tactile Paper sheet in the paper feed tray. Only place one sheet at a time.

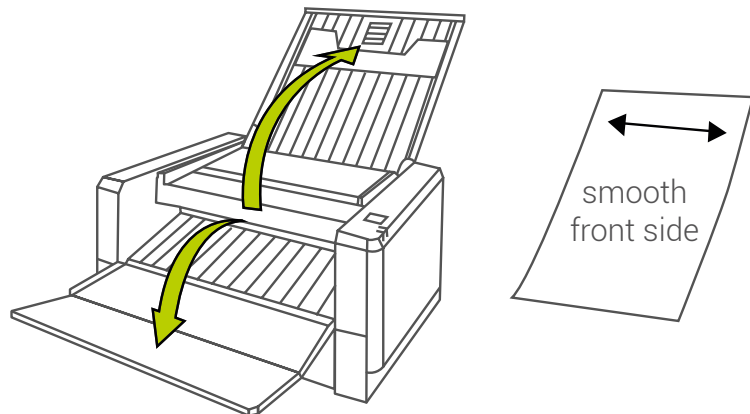

Note 1: Set the side with the smooth texture facing up.

Note 2: Insert only one sheet of Tactile Paper.

Note 3: Close the paper feed tray before closing the lid.

Note 4: Only original Tactile Paper may be used. Any other paper may damage the device.

5. Printing

Start of printing

- 1 Select „Easy Tactix“ in the list of printers on Print menu.
- 2 Start to print



Caution: Do not pull out the Tactile Paper sheet during printing. This may damage the printer.



accessible version